

Sauna Speaker
SSP500

AUDAC

PROFESSIONAL AUDIO EQUIPMENT

2-Way Flush mount Sauna Speaker SSP500

Installation Guide

Installation Procedure

- 1) Cut a hole in the wall / ceiling on the desired mounting location of the loudspeaker with a diameter of 120 mm.
- 2) Take the loudspeaker, and remove the front grill.
The front grill is attached to the loudspeakers basket by a simple clicking system, and can be easily removed by carefully clicking the front grill away from the loudspeaker's housing.
- 3) Provide the loudspeaker connection cable through the mounting hole.
- 4) Connect the loudspeaker to the output terminals of the amplifier.

Note

Notice the polarity markings when connecting the loudspeaker.

- 5) Place the loudspeaker on the desired mounting location, and put the loudspeaker's housing through the cut hole. Fasten the loudspeaker by putting four screws through the provided holes, and tighten them. Always use the proper fasteners, depending of the mounting surface.

Note

On the bottom side where the connection terminals of the loudspeaker are located, there's a gap provided in the loudspeaker housing and front grill. This gap is meant to let the moisture flow out of the loudspeaker. Always make sure this gap is mounted on the bottom side of the loudspeaker, when mounted in vertical position.

- 6) Once the mounting screws are tightened, the front grill can be assembled to the loudspeaker. This can be done by simply clicking the front grill to the loudspeaker's housing. Notice the front grill will only fit in one position, because of the gap to let the moisture flow out on the bottom side.

Specifications

Maximal Power	40 Watt
RMS Power	20 Watt
Impedance	8 Ohm
Sensitivity (1W / 1m)	86 dB
Max SPL	99 dB
Frequency response (± 3 dB)	75 Hz – 20 kHz
Drivers:	1" HF Coaxial 5" LF
Dimensions	\varnothing 165 mm x 74 mm
Cut-out dimensions	\varnothing 120 mm
Built-in depth	60 mm
Weight	0.62 Kg
Heat resistance	up to 100°C
Humidity resistance	90 ~95% R.H.
Ingress Protection	IP44

