



AUDAC System Manager

Apple Mac install procedure

Download the latest version of AUDAC system manager on

<http://audac.eu/software/d/audac-system-manager>

And choose the Mac version according to your processor speed
(Apple stopped using 32-bit processors around 2007)

additional effort.
Firmware updates can be achieved directly via the local network or with a USB transfer.
Detect all 'smart' devices with their peripherals in your network even if they are out of IP range.

Other functions such as creating and reloading device backups, preloading configurations to peripheral devices and system monitoring will make any installers' life easier.

For some functions, the APC100 configuration unit is required to establish the connection between the System manager (software) and the physical device.

Download for Windows 7-8-10 32 bit

Download for Windows 7-8-10 64 bit


Download for Windows XP

Download for Mac Linux 64 bit


Download for Mac Linux 32 bit

Download manual


Once downloaded, the AUDAC System Manager folder can be placed in your applications folder.

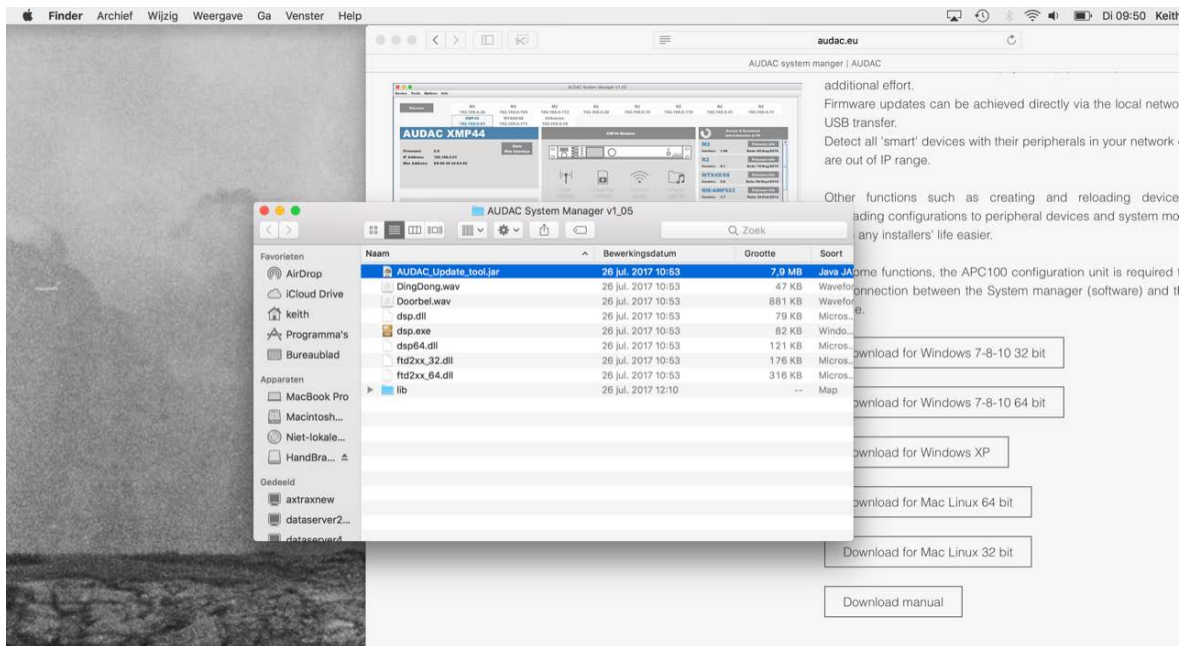

For opening AUDAC System Manager the first time, it's important to select 'open with!' Select the AUDAC_Update_tool.jar jar file, use the secondary click to open the option menu and choose 'open with' Jar Launcher. (This will only be necessary the first time opening AUDAC System Manager. Next time a double click will only be needed)

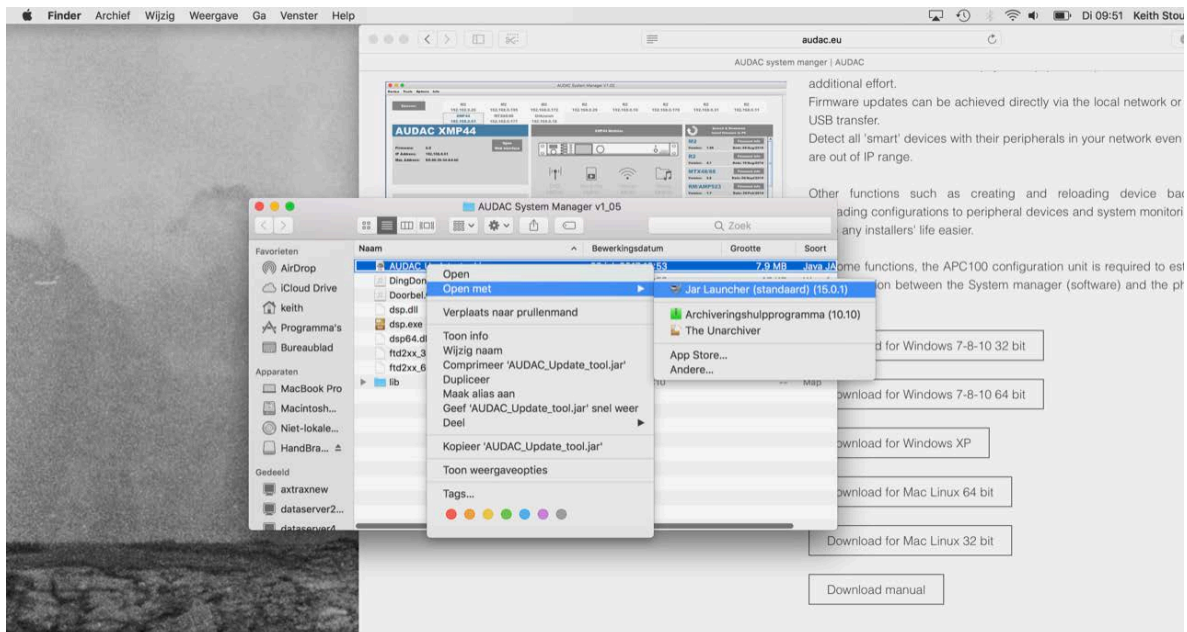

A message prompt will pop-up saying that not all R2/M2 updates are possible while using a Mac.

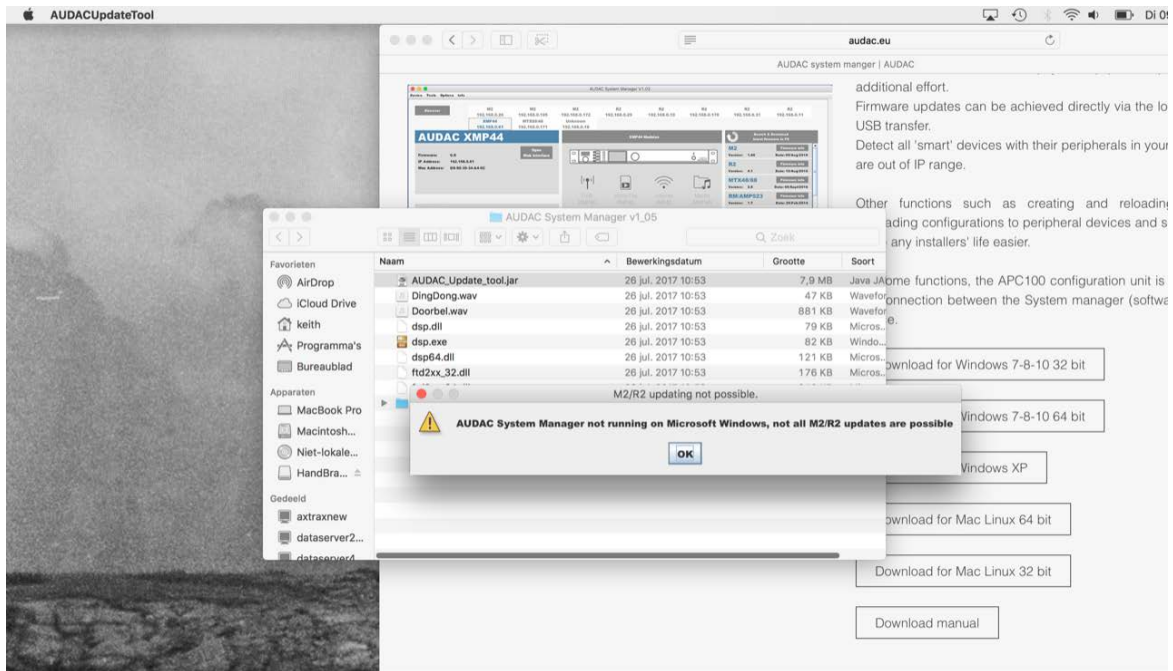

Afterwards AUDAC System manager can be used

